


STUB FOR NEW CONSTRUCTION

- NOTES FOR CONNECTING TO NEW SEWER MAIN:
1. CONNECTION TO MAIN SHALL BE BY WYE'S OR TEE'S INSTALLED AS PART OF THE SEWER MAIN CONSTRUCTION.
  2. LOCATION OF STUB TO BE 10' DOWNHILL FROM THE LOT CENTER LINE.
  3. SHOW CENTERLINE STATION OF THE LATERAL FROM THE NEAREST DOWNSTREAM MANHOLE. USE SAME STATIONING USED FOR SEWER MAIN.

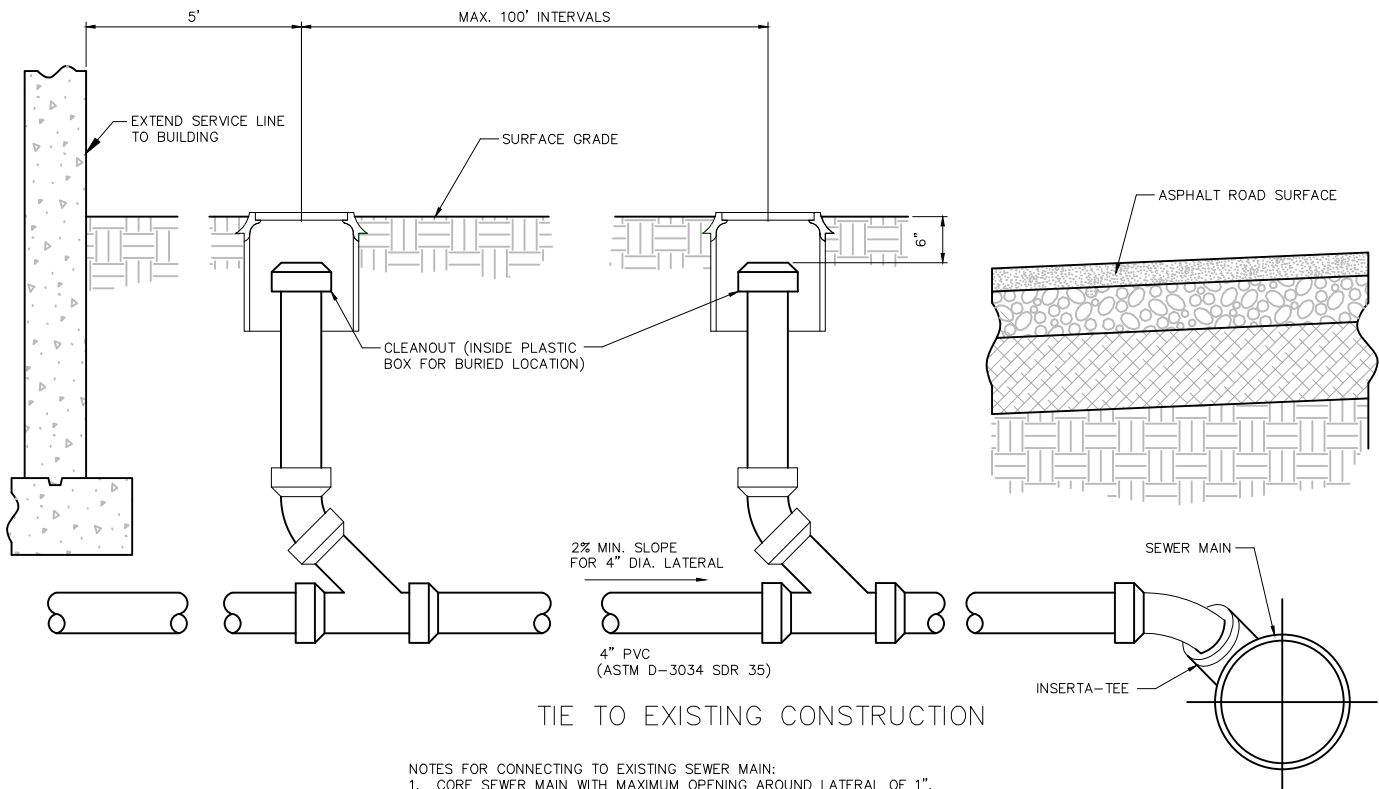

TIE TO EXISTING CONSTRUCTION

- NOTES FOR CONNECTING TO EXISTING SEWER MAIN:
1. CORE SEWER MAIN WITH MAXIMUM OPENING AROUND LATERAL OF 1".
  2. CONNECTION TO BE MADE IN PRESENCE OF PUBLIC WORKS INSPECTOR.